



Naos 1








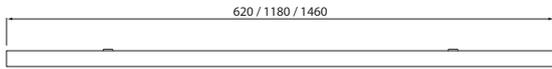


Naos 2

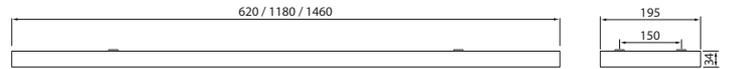

	A	B	C	D	E
1.2ft	620	145	34	470	100
1.4ft	1180	145	34	1030	100
1.5ft	1460	145	34	1310	100
2.2ft	620	195	34	470	150
2.4ft	1180	195	34	1030	150
2.4ft MPR	1180	320	34	1030	275
2.5ft	1460	195	34	1310	150
2.5ft MPR	1460	320	34	1310	275

Cable gland positions			
Length of luminaire	A	B	C
1.2ft/2.2ft	105	-	27,5
1.4ft/2.4ft/2.4ft MPR	105	590	27,5
1.5ft/2.5ft/2.5ft MPR	105	730	27,5

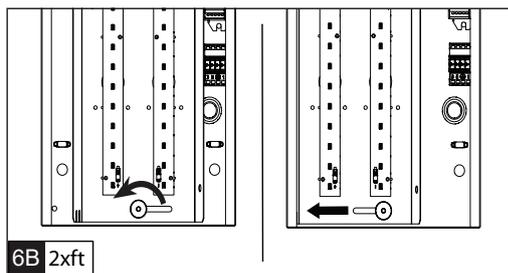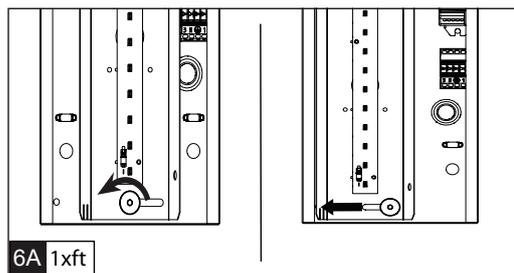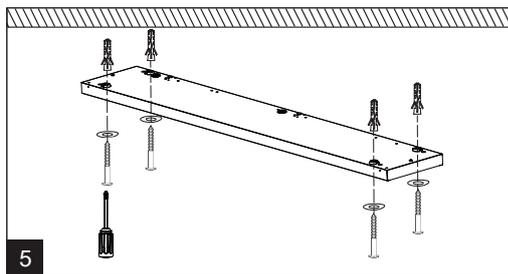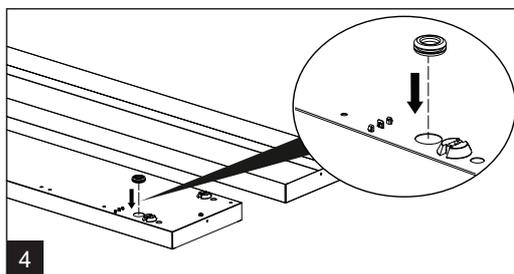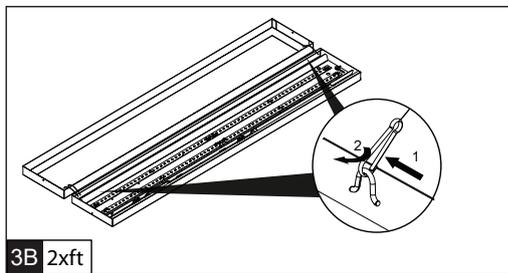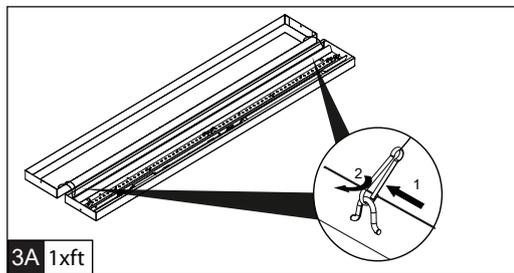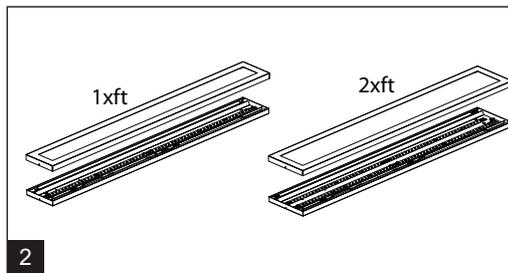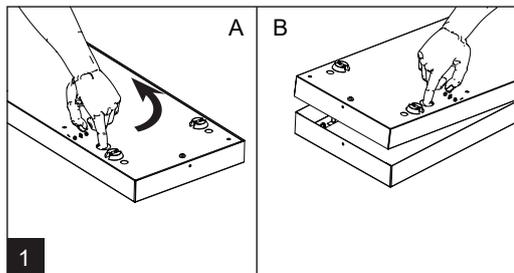


Valaisimen saa asentaa vain sähköalan ammattilainen. Käytä ainoastaan syöttöjännitettä ja taajuutta joka on merkitty valaisimeen/liitäntälaitteeseen. Kytke virta pois päältä ennen asennusta tai huoltoa. Tämä asennusohje on säilytettävä ja sen on oltava käytössä asennuksessa ja huollossa. Tämän valaisimen valonlähde ei ole vaihdettavissa. Kun valonlähde rikkoutuu, koko valaisin on poistettava käytöstä.

Vi rekommenderar att installationen görs av en behörig elektriker. Använd endast driftspänning och frekvens som är märkt på armaturen/förkopplingsdonet. Bryt stömmen före installation eller service. Denna monteringsanvisning bör sparas och finnas tillgänglig vid installation eller framtida service. Ljuskällan till denna armatur kan inte bytas ut. När ljuskällan når sin livslängd ska hela armaturen bytas ut.

Only a professional electrician is allowed to do the installation. Use only rated voltage and frequency as marked in the fixture/driver. Switch off the current before installation or service. This mounting instruction must be kept available during installation and for future maintenance. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

NAOS

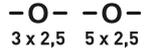IP20    3 x 2,5 5 x 2,5 DALI  

JULKISTEN TILOJEN VALAISIN | ARMATUR FÖR OFFENTLIGA UTRYMMEN | OFFICE LUMINAIRE

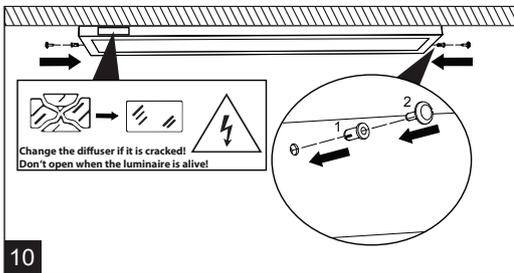
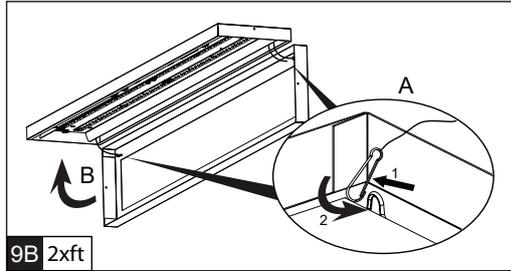
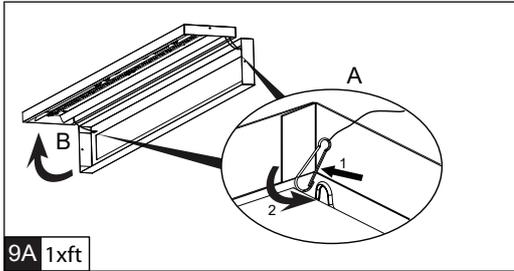
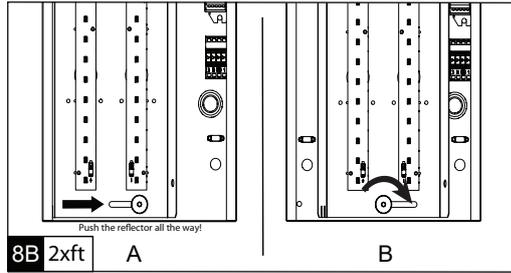
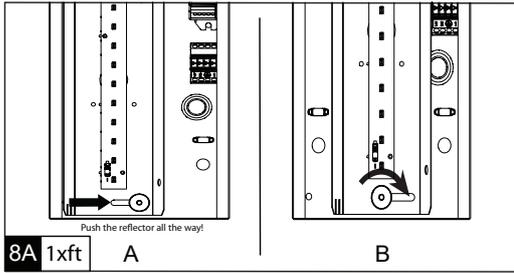
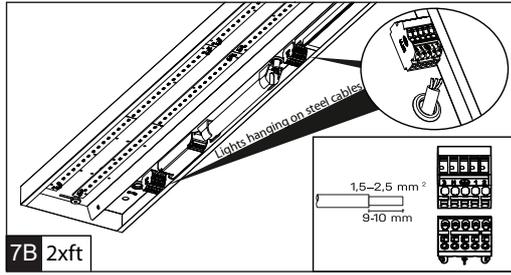
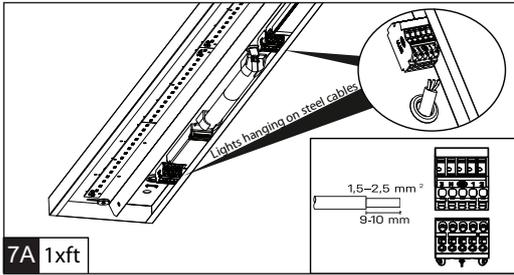
















Table of maximal number of luminaires in one line			10A B	16A B	10A C	16A C
Length	Σlm	Σlm	Σ luminaires	Σ luminaires	Σ luminaires	Σ luminaires
1.2ft	1300	1600	32	50	52	85
1.4ft	2600		32	50	52	85
1.4ft	3200	4400	10	16	16	26
1.5ft	3250	4000	10	16	16	26
2.2ft	2600		32	50	52	85
2.2ft	3200	4400	10	16	16	26
2.4ft	5200	6400	10	16	16	26
2.5ft	6500	8000	10	16	16	26

Huolto- ja kierrätysohjeet

Underhålls- och återvinningsinstruktioner

Hooldus- ja utiliseerimisjuhend

Maintenance and recycling instructions

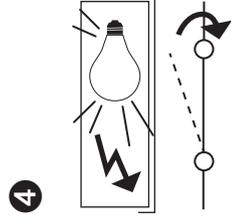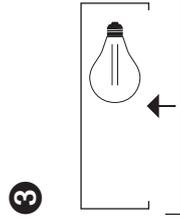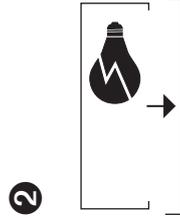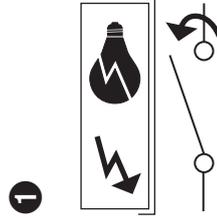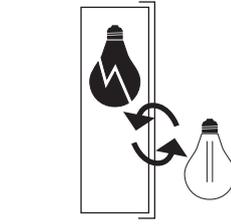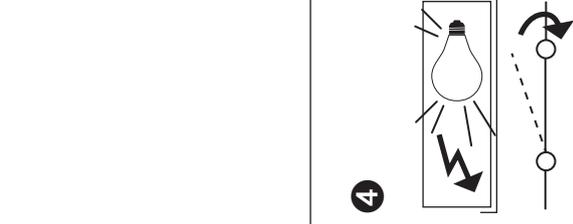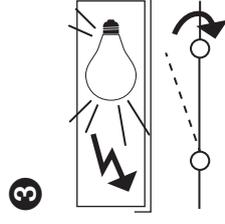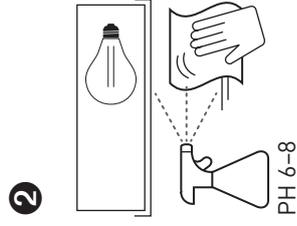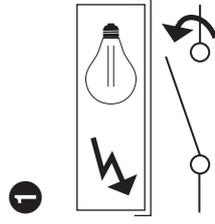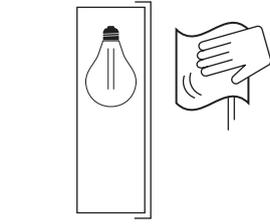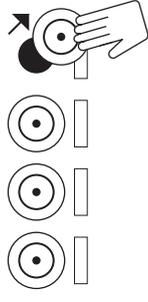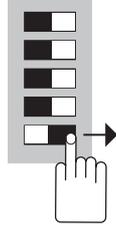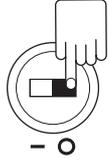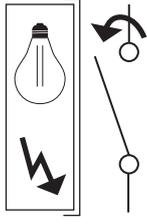

4

Odota, että valaisin on jäähtynyt.
Väntä tälls lampan har svalnat.
Oodake, kuni valgusti on jähtunud.
Wait until the luminaire has cooled down.

