


## CIO MULTI PIR



IP20

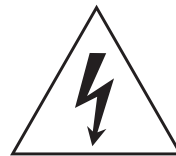


-0



ALASVALO | DOWNLIGHT ARMATUR | DOWNLIGHT

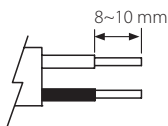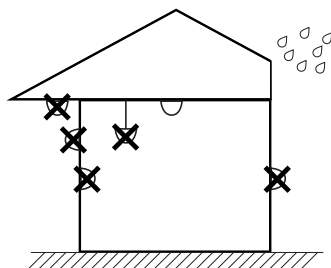



Kytettävä erillisessä rasiassa.  
Inkoppling via separat dosa.  
Connection in a separate terminal box.

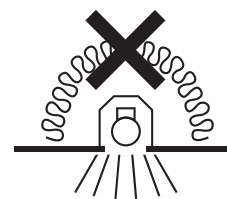

Valaisinta ei saa asentaa suoraan eristemateriaaliin.

Denna armatur är inte avsedd för att täckas med värmeisolerande material.

The luminaire is not suitable for covering with thermally insulated material.

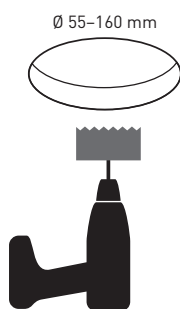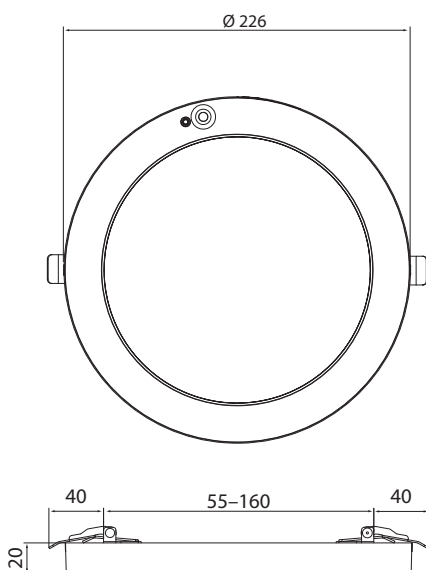**FI**

Tämä tuote sisältää energiatehokkuusluokan F valonlähteen.

Valaisimen saa asentaa vain sähköalan ammattilainen. Käytä ainoastaan syöttöjännitettä ja taajuutta joka on merkitty valaisimeen/liitäntälaitteeseen. Kytke virta pois päältä ennen asennusta tai huoltoa. Tämä asennusohje on säilytettävä ja sen on oltava käytössä asennuksessa ja huollossa. Tämän valaisimen valonlähde ei ole vaihdettavissa. Kun valonlähde rikkoutuu, koko valaisin on poistettava käytöstä.

**SE**

Denna produkt innehåller en ljuskälla med energieffektivitetsklass F.

Vi rekommenderar att installationen görs av en behörig elektriker. Använd endast driftspänning och frekvens som är märkt på armaturen/förkopplingsdonet. Bryt strömmen före installation eller service. Denna monteringsanvisning bör sparas och finnas tillgänglig vid installation eller framtida service. Ljuskällan till denna armatur kan inte bytas ut. När ljuskällan når sin livslängd ska hela armaturen bytas ut.

**EN**

This product contains a light source of energy efficiency class F.


Only a professional electrician is allowed to do the installation. Use only rated voltage and frequency as marked in the fixture/driver. Switch off the current before installation or service. This mounting instruction must be kept available during installation and for future maintenance. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

# CIO MULTI PIR


IP20




-0

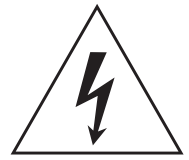

## ALASVALO | DOWNLIGHT ARMATUR | DOWNLIGHT


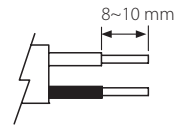


Kytettävä erillisessä rasiassa.  
Inkoppling via separat dosa.  
Connection in a separate terminal box.

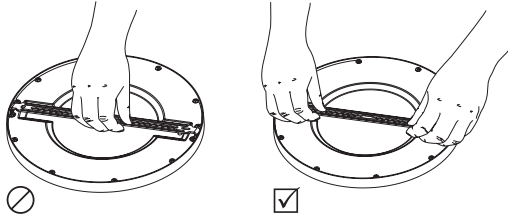


Ennen asennusta, irrota kannake valaisimesta.  
Before installation, take out the bracket from panel.



### PINTA-ASENNUS / WITHOUT MOUNTING HOLE

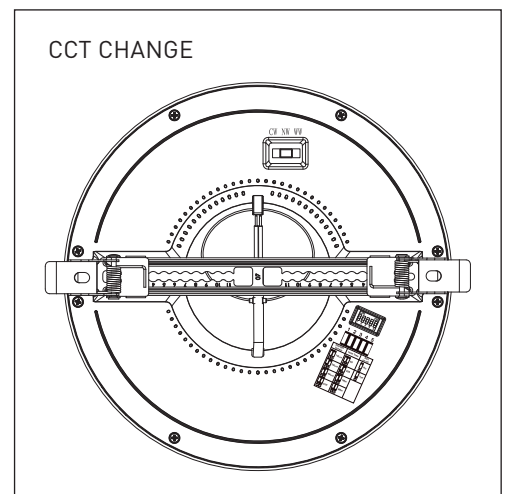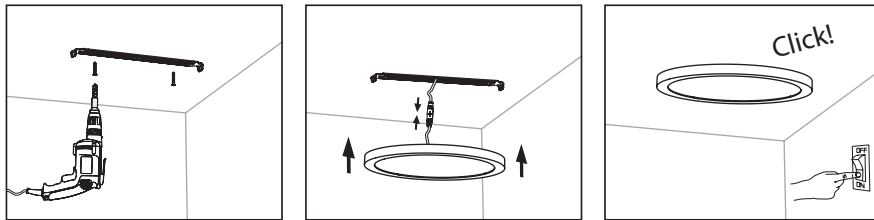


### VALAISIMEN IRROTUS / UNINSTALLING

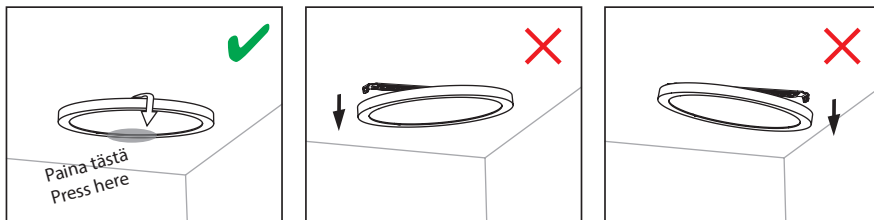

### PUOLIUPPOASENNUS / WITH MOUNTING HOLE READY

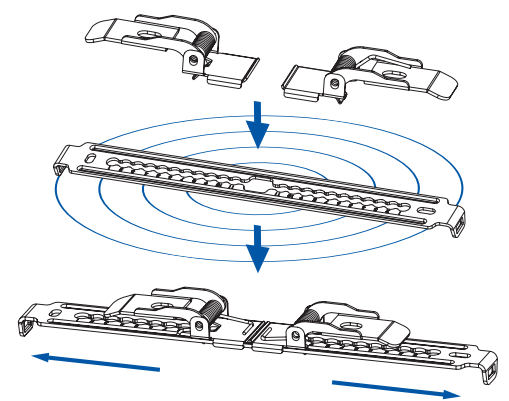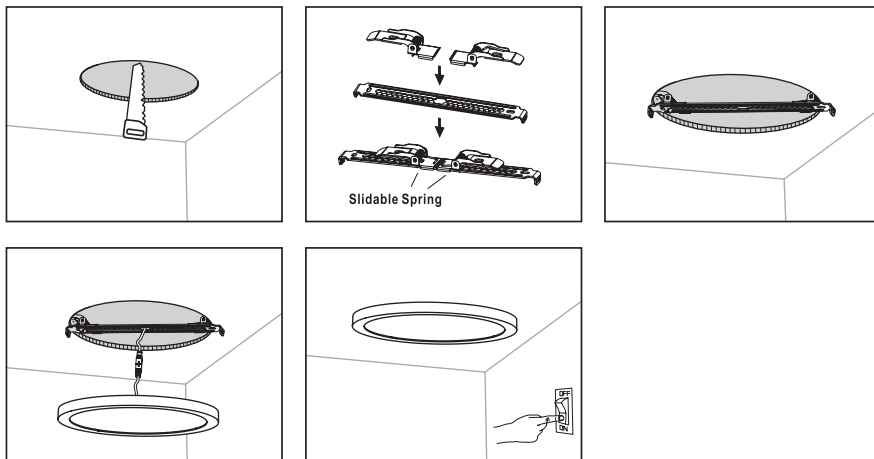

### VALAISIMEN IRROTUS / UNINSTALLING

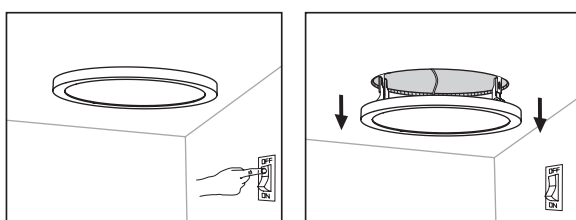


# CIO MULTI PIR

IP20





-0

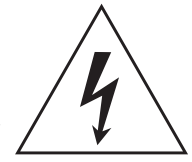


## ALASVALO | DOWNLIGHT ARMATUR | DOWNLIGHT
  
### SENSOR SETTINGS



Daylight Sensor	Hold Time	Soft on/off
10Lux ①②	5S ③④	No ⑤
20Lux ①②	30S ③④	Yes ⑤
40Lux ①②	1Min ③④	
24H ①②	3Min ③④	

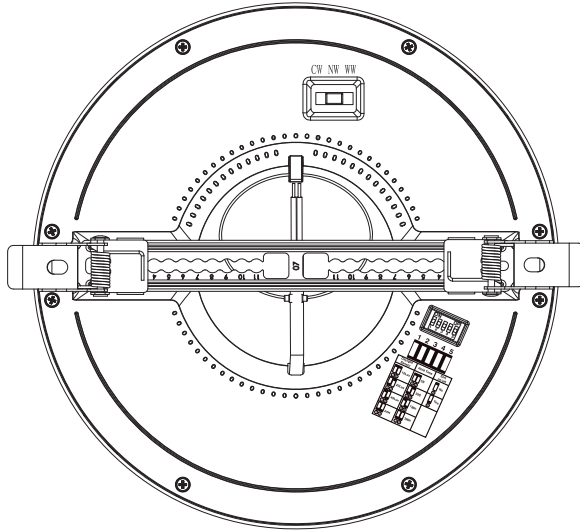

### PIR SENSOR

Detection range 3-6 m  
Detection angle 0~120°

### Daylight Sensor


Lux level 10 lux / 20 lux / 40 lux / 24 h made when the PIR is activated.  
If set to "24 h" the light will operate at all light levels.

### CCT SWITCH

WW - warm white 3000 K  
NW - natural white 4000 K  
CW - cool white 6500 K


### Hold Time

The length of time 5 s/30 s/1 min the light will remain "ON" once the PIR is activated. If the light is already on, the timer will reset each time the PIR is activated.

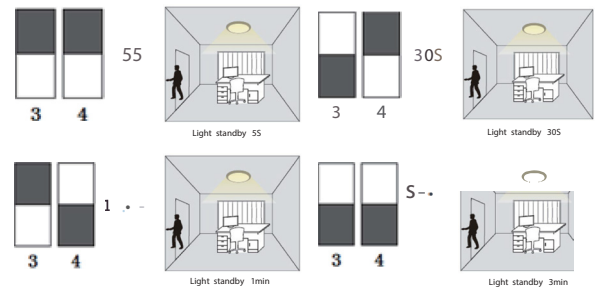

### Soft on/off

'No' refers to the lamp turning on with standard brightness when PIR is activated. 'Yes' refers to the lamp gradually brightening in 1S when activated. Once the detection of heat is removed the light will turn off gradually in 3S.

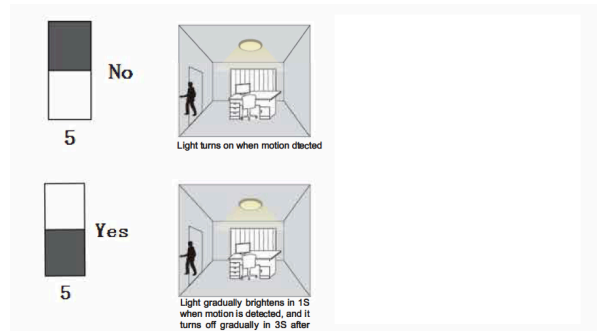

Additional function: when it is necessary, the sensor function can be canceled

	Operation	Time interval
Cancel	Turn on → off → on	Off time < 1S
Restore	Turn off → on	Off time < 2S

