



SANSA

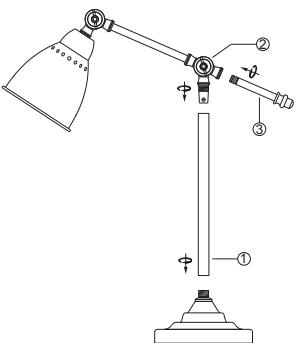

PÖYTÄVALAISIN | BORDSLAMPA | LAUAVALGUSTI | DESK LAMP

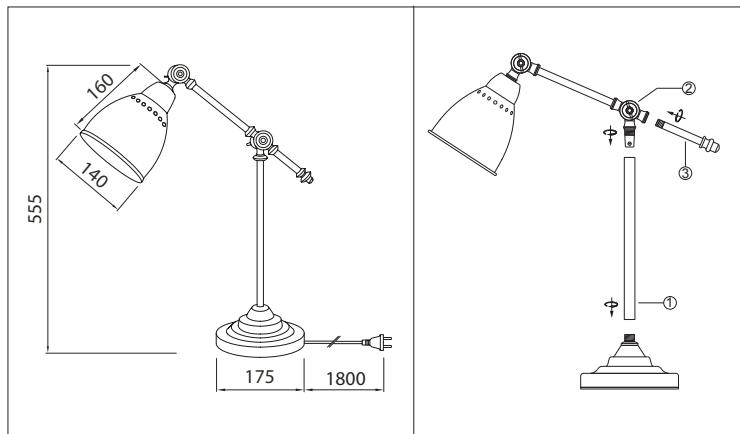

**Max 40W
E27**

220-240 V ~ 50/60 Hz

Käytä ainostaan valonlähettää ja tehoa joka valaisimeen on merkity. Kytke virta pois päältä ennen asennusta tai huoltoa. Liitäntäjohtoja ei voi vaihtaa eikä korjata. Mikäli johto vaurioituu, on valaisin hävittävä ja toimitettava asianmukaisesti kierrätyspisteeseen. Tämä asennusohje on säilytettävä ja sen on oltava käytössä asennuksessa ja huollossa.

Använd endast ljuskälla och effekt som är märkta på armaturen. Bryt av strömmen före installation eller service. Anslutningsledningen kan inte bytas eller repareras. Om ledningen skadas skall armaturen förstöras. Den skadade armaturen är riskavfall och skall förfas till mottagningspunkt för problemavfall. Denna monteringsanvisning bör sparas och finnas tillgänglig vid installation eller framtida service.

Kasuta ainult valgustile märgitud valgusallikat ja võimsust. Lülitä enne paigaldust ja hooldust vool välja. Selle valgusti juhet ei saa välja vahetada. Kui juhe on kahjustatud, tuleb valgusti hävitada. Käesolevat juhendit tuleb säilitada ning järgida paigaldamisel ja hooldusel.

Use only light sources and rated wattages as marked in the luminaire. Switch off the current before installation or service. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed. This mounting instruction must be kept available during installation and for future maintenance.