


SANSA



SEINÄVALAISIN | VÄGGLAMPA | SEINAVALGUSTI | WALL LAMP

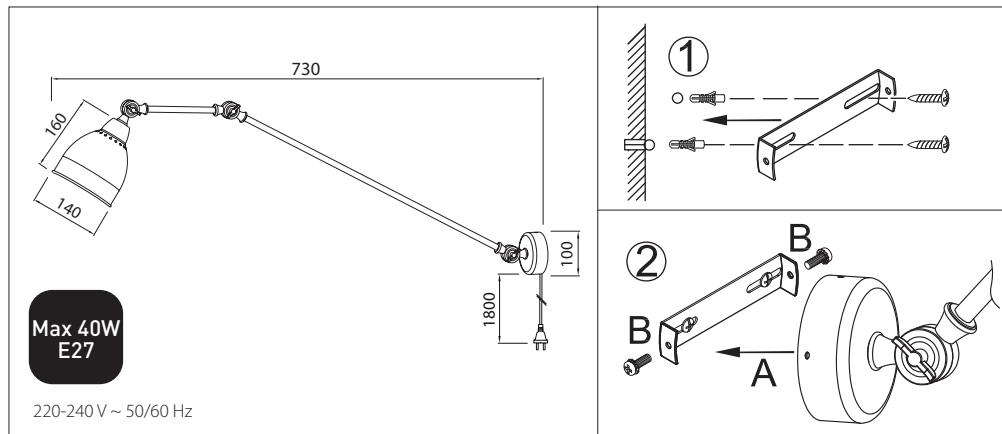

NRO	E-NR	KOODI KOD CODE	VÄRI FÄRG VÄRV COLOUR	VALONLÄHDE LJUSKÄLLA VALGUSALLIKAS LIGHT SOURCE	KG	GTIN	
4118751	7503119	A1SACD	SANSA SEINÄVAL. E27 MAX 40W VA-HO	Valkoinen-hopea/Vit-silver/ Valge-höbe/White-silver	E27 max 40W	0,95	6435200226464
4126222	7504062	A1SACL	SANSA SEINÄVAL. E27 MAX 40W HA-HO	Harmaa-hopea/Grå-silver/ Hall-höbe/Grey-silver	E27 max 40W	0,95	6435200238146
4126223	7504063	A1SACM	SANSA SEINÄVAL. E27 MAX 40W MU-HO	Musta-hopea/Svart-silver/ Must-höbe/Black-silver	E27 max 40W	0,95	6435200238160

Käytä ainostaan valonlähettää ja tehoa joka valaisimeen on merkity. Kytke virta pois päältä ennen asennusta tai huoltoa. Liitäntäjohto ei voi vaihtaa eikä korjata. Mikäli johto vaurioituu, on valaisin hävittävä ja toimitettava asianmukaisesti kierrätyspisteeseen. Tämä asennusohje on säilytettävä ja sen on otava käytössä asennuksessa ja huollossa.

Använd endast ljuskälla och effekt som är märkta på armaturen. Bryt av strömmen före installation eller service. Anslutningsledningen kan inte bytas eller repareras. Om ledningen skadas skall armaturen förstöras. Den skadade armaturen är riskavfall och skall förfas till mottagningspunkt för problemavfall. Denna monteringsanvisning bör sparas och finnas tillgänglig vid installation eller framtida service.

Kasuta ainult valgustile märgitud valgusallikat ja võimsust. Lülita enne paigaldust ja hooldust vool välja. Selle valgusti juhet ei saa välja vahetada. Kui juhe on kahjustatud, tuleb valgusti hävitada. Käesolevat juhendit tuleb säilitada ning järgida paigaldamisel ja hooldusel.

Use only light sources and rated wattages as marked in the luminaire. Switch off the current before installation or service. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed. This mounting instruction must be kept available during installation and for future maintenance.